

GentleTents GT ROOF Inflatable Roof Top Tent Instruction Manual

GentleTents GT ROOF Inflatable Roof Top Tent Instruction Manual



COMPONENT PARTS

- TENT & DROP STITCH PLATFORM



- RAIN COVER




- PROTECTIVE COVER



- TELESCOPIC LADDER




- MOUNTING SET

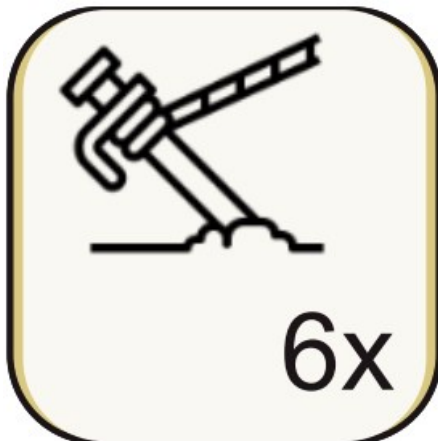

- 12V ELECTRIC PUMP



- PEGS

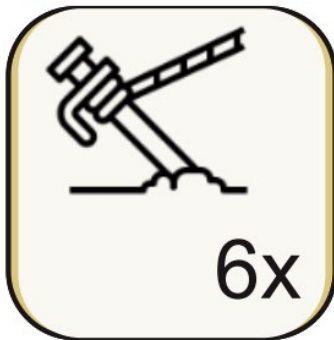

- HAND PUMP




- ROPES




- REPAIR KIT



ADAPTER 1 VALVES

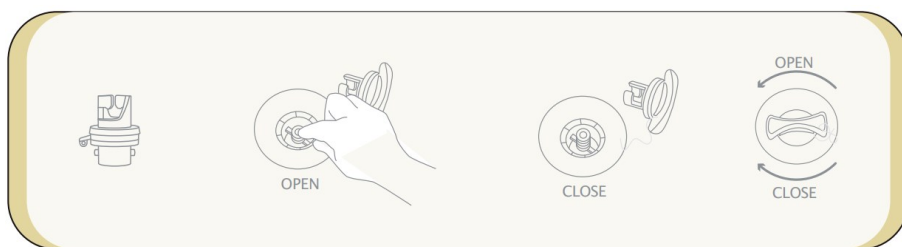

ADAPTER 2

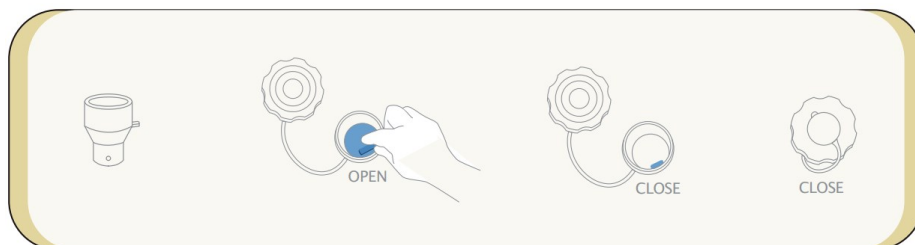

NOT INCLUDED

Items you need which are not included:

- WRENCH 10mm




- ROOF RACK




CONSTRUCTION

STEP 1

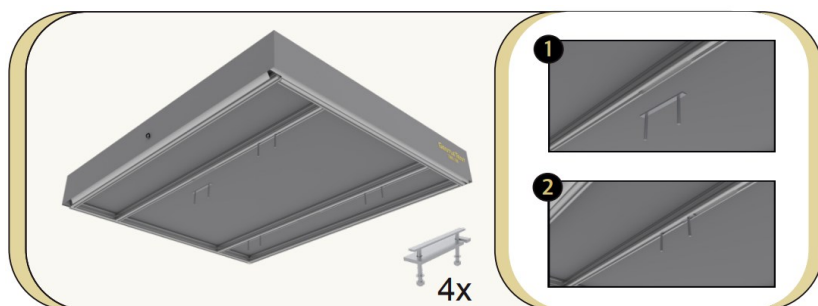


1. Arrange the mounting sets correctly
2. Insert the mounting sets into the rail

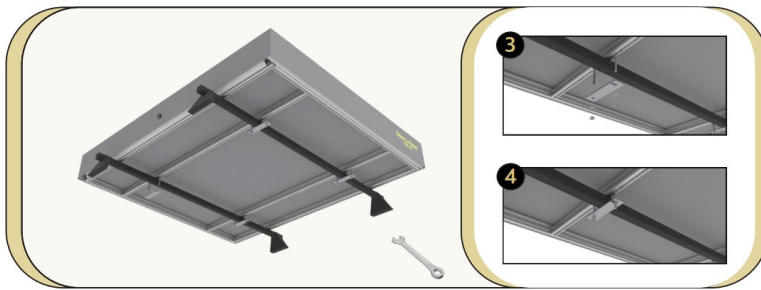


3. Pull the mounting sets exactly over the roof racks
4. Use the 10mm wrench to tighten the screws

STEP 2

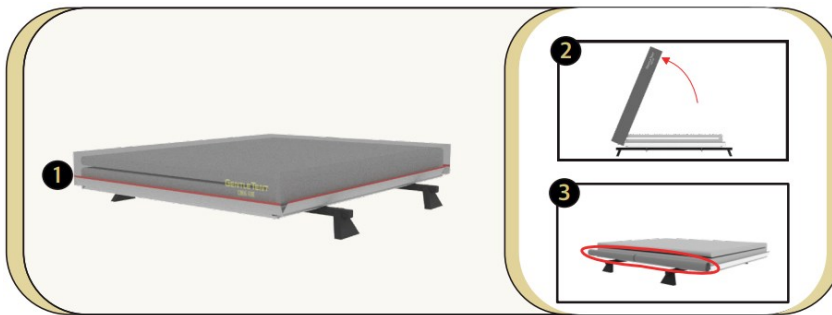

1. Open the zipper which is located under the overlap
2. Attach the protective cover to the places provided for this purpose

STEP 3

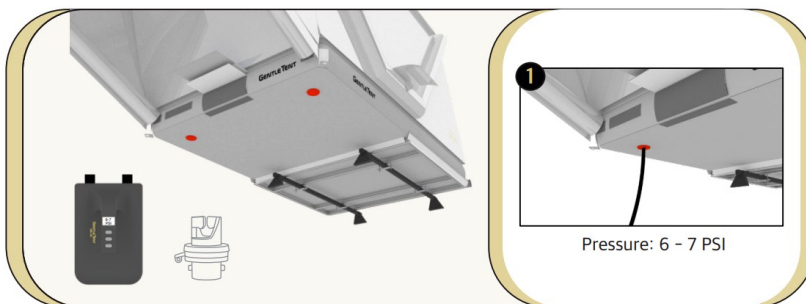

 You need adapter 1 and the electric pump


1. Inflate drop stitch-platform

STEP 4



1. Attach the ladder to the intended location

STEP 5

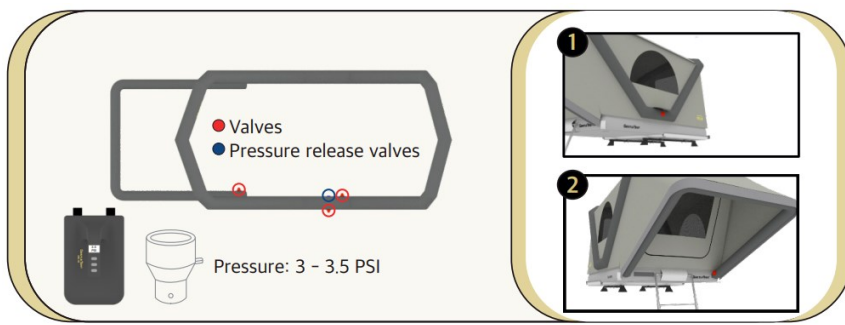

 You need adapter 2 and the electric pump

1. Inflate tent body
2. Inflate tent nose

STEP 6

1. Mount permanent cover



2. If required mount cover extension



Permanent cover for




- UV & rain protection
- Cover extension for



- Heavy rain
- Thermo support


DISMANTLING

STEP 1

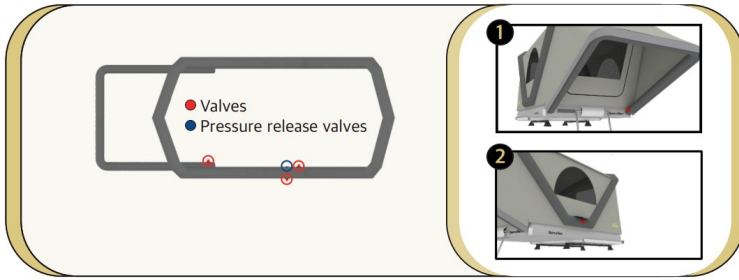

1. Deflate tent nose
2. Deflate tent body

2. STEP

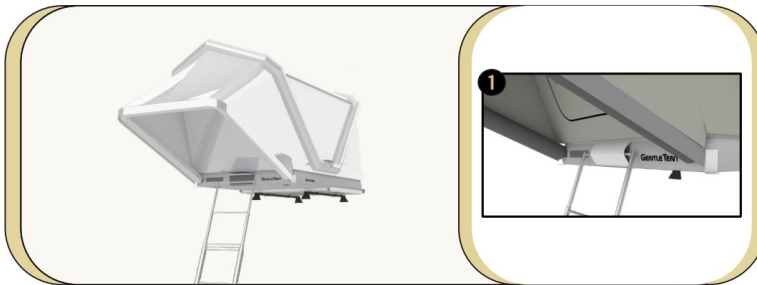


1. Dismantle the ladder

STEP 3




1. Deflate the drop stitch platform

STEP 4

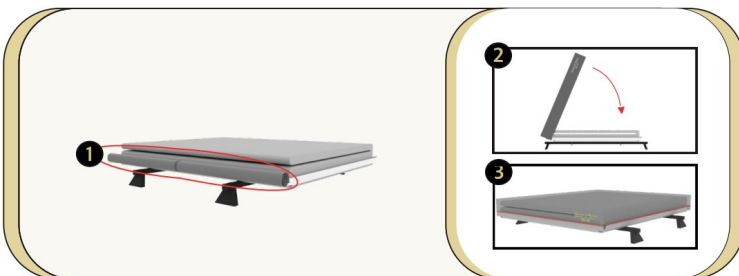


1. Disconnect the protective cover
2. Unroll the protective cover and lay it over the platform
3. Close the zipper which is located under the overlap

STEP 5

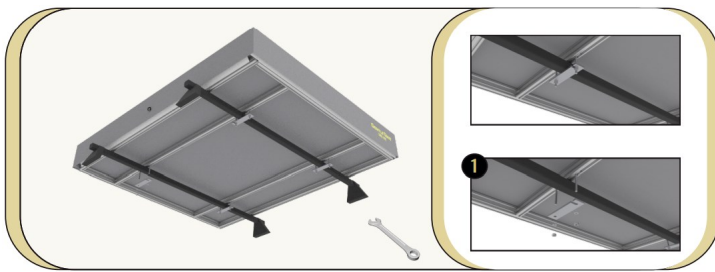

1. Use the 10 mm wrench to open the screws

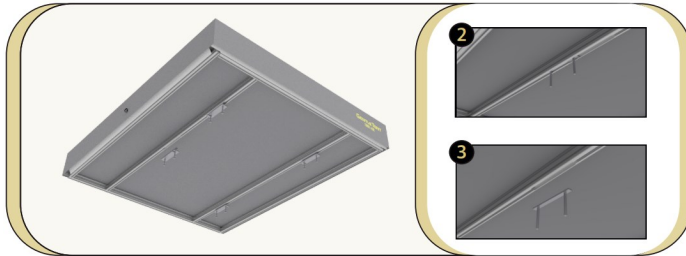

2. Pull the mounting sets out of the rail

Optional accessories

- GT ROOF AWNING



- GT MATTRESS



- GT MATTRESS L





WEBSITE

www.gentletent.com

ATTENTION: PLEASE OBSERVE THE FOLLOWING TO PREVENT DAMAGE

- SPEED LIMIT



- NO SHARP ITEMS



- NO FIRE OR HEAT



- NO SMOKING



FAQ

1. What to do in case of air loss?

Please check the following things: First you should check if the blue valve flap seals well. To do this, unscrew the valve, if no air escapes, the blue valve flap is sealing. Repeat this procedure for all valves, do not forget the valves located inside the tent. Another reason for air loss can be an incorrectly adjusted pressure relief valve. If air escapes through the orange relief valve, please contact us. Don't worry, with a little instruction you can fix the problem on your own. If the hose is still losing air after the above measures, please try to locate the leak. Contact us by mail or phone to discuss further steps.

2. How do I store my rooftop tent?

After each trip, you should check whether moisture has penetrated the system. If the roof tent is poorly sealed, it can absorb moisture from the environment even during the journey. A rooftop tent should always be stored completely dry. In winter, we recommend detaching the top tent from the platform and storing it in a dry and heated place. Damage can occur if stored in a damp place.

3. How do I care my rooftop tent?

Basically, a cloth or a soft brush and lukewarm water are sufficient for regular cleaning. For stubborn

stains, a mild detergent or a special tent cleaner can be used. After frequent cleaning, it is advisable to impregnate the tent. To do this, the tent must be dry before treatment, then impregnated and dried completely again.

Contact



ADDRESS

GentleTent GmbH
Khleslplatz 8,
1120 Wien, Austria



PHONE

+43 664 3941078



E-MAIL

support@gentletent.com

Documents / Resources



GT ROOF Inflatable Roof Top Tent

Instruction Manual · GT ROOF Inflatable Roof Top Tent, GT ROOF, Inflatable Roof Top Tent, Roof Top Tent, Top Tent, Tent

Published: October 3, 2023

Related Topics

Tent

Roof Top Tent

Top Tent