



Model:3J-EW

EN >>

Table of Contents

Use

Name of main part -----	02
Notes -----	03
Use of Euro Classic Window -----	04

Installation

Product Size -----	05
Packing List -----	06
Installation of Euro Classic Window -----	07

Other items


Warranty regulation -----	09
Product Warranty Card -----	10

-
- Thank you for choosing the product! Please read this manual carefully before installation.
After reading, please keep it properly for future reference.



Name of main part

Name of main part

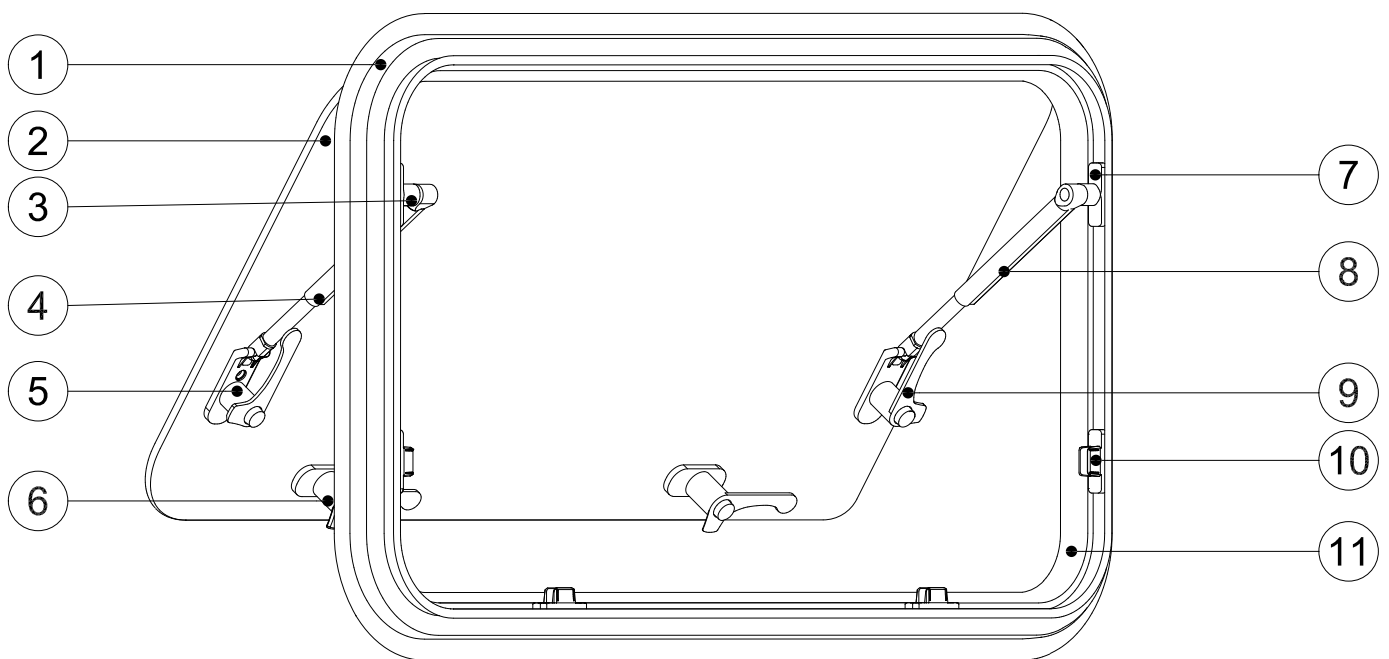

- | | |
|------------------------------|--------------------------|
| ① Outer aluminum frame | ⑦ Right fixed shaft seat |
| ② Double-layer acrylic glass | ⑧ Right struthaft seat |
| ③ Left fixed shaft seat | ⑨ Right support rod seat |
| ④ Left strut | ⑩ Handle support |
| ⑤ Left support rod seat | ⑪ Adhesive strip |
| ⑥ Lower handle | |

Notes

Please read through this Manual before mounting, and install the casement window in strict accordance with the provisions contained in this Manual. In addition, keep this Manual properly for further reference.

To avoid any personal injury or property loss of users and third parties, please observe the safety warnings and precautions contained herein strictly.

• Marks and meanings

	Caution! It's possible to cause severe injury or damage.。
	Caution! It's possible to cause damage if the instructions are not followed in the operation process.
	This sign means such an operation is banned.
	This sign means a remark on related information.



Warning!

1. The mounting of this product should be handled by professionals as far as possible;
2. The manufacturer will not take on any responsibility if the product, damaged by external forces, is refitted without an express permission of the manufacturer;
3. Please close the window before driving the vehicle,. Otherwise, the window might be damaged during driving.




Attention


1. Please consult the dealer with any solution if any malfunction occurs.
2. Please check whether the window has been properly locked before driving and the commencement of your journey.
3. Do not open the window to a large extent during driving or in a weather of strong breeze or heavy rain. Do not leave the vehicle when the window is open.
4. Please confirm that all handles at the bottom and in both ends are locked in corresponding position and the window is completely locked when you are closing it.

Use of Euro Classic Window

Using the Window

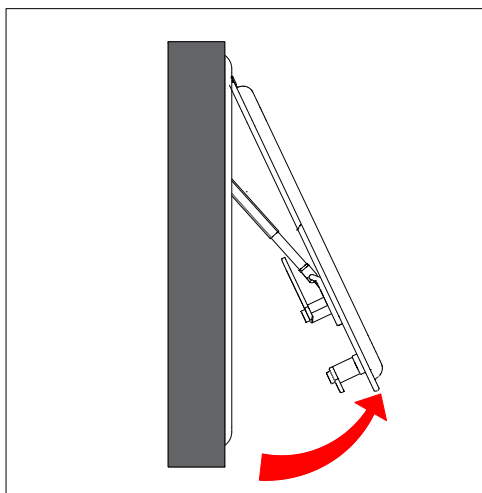

Opening the Window

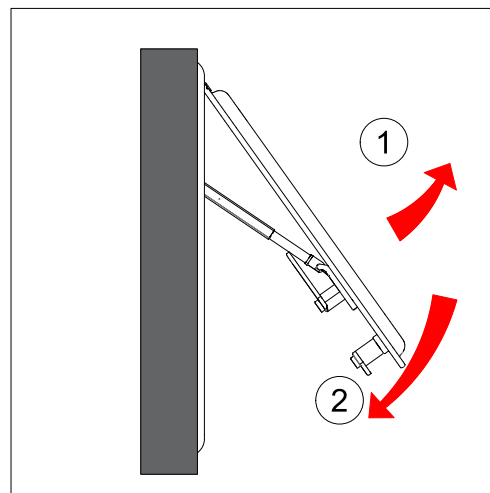


Closing the Window

Mechanical Strut:


1. Opening instruction: unlock all handles and push the window outwards until you hear of clicks from struts at both ends, indicating that the window has reached the set opening degree.
2. Closing instruction: push the window outwards a little, and then pull it back and lock all handles.

Stepless Strut:

1. Opening instruction: unlock all handles and push the window outwards until it stops at a certain position as desired. The window is opened to the fullest extent as if it cannot be push outwards any more.
2. Closing instruction: pull the window back directly and unlock all handles.

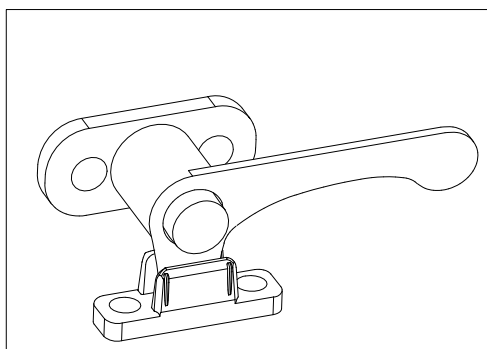

Level One of the Support Seat

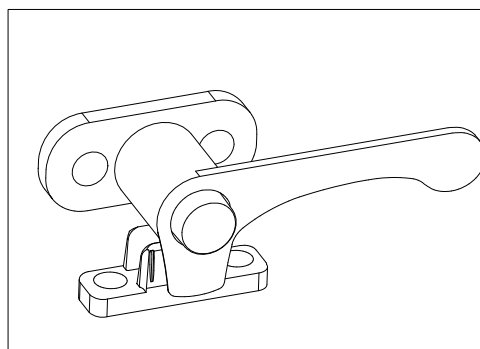

Level Two of the Support Seat

Level one of the support seat: the locking end of the handle is locked in the middle of two baffle plates of the support seat, indicating that the window is not completely closed at the moment, and a gap remains.


Level two of the support seat: the locking end of the handle is locked on the inside baffle plate of the support seat, indicating that the window is completely closed at the moment, and there is no gap.



Please ensure that all handles have been locked before driving!

Product Size


Unit: mm

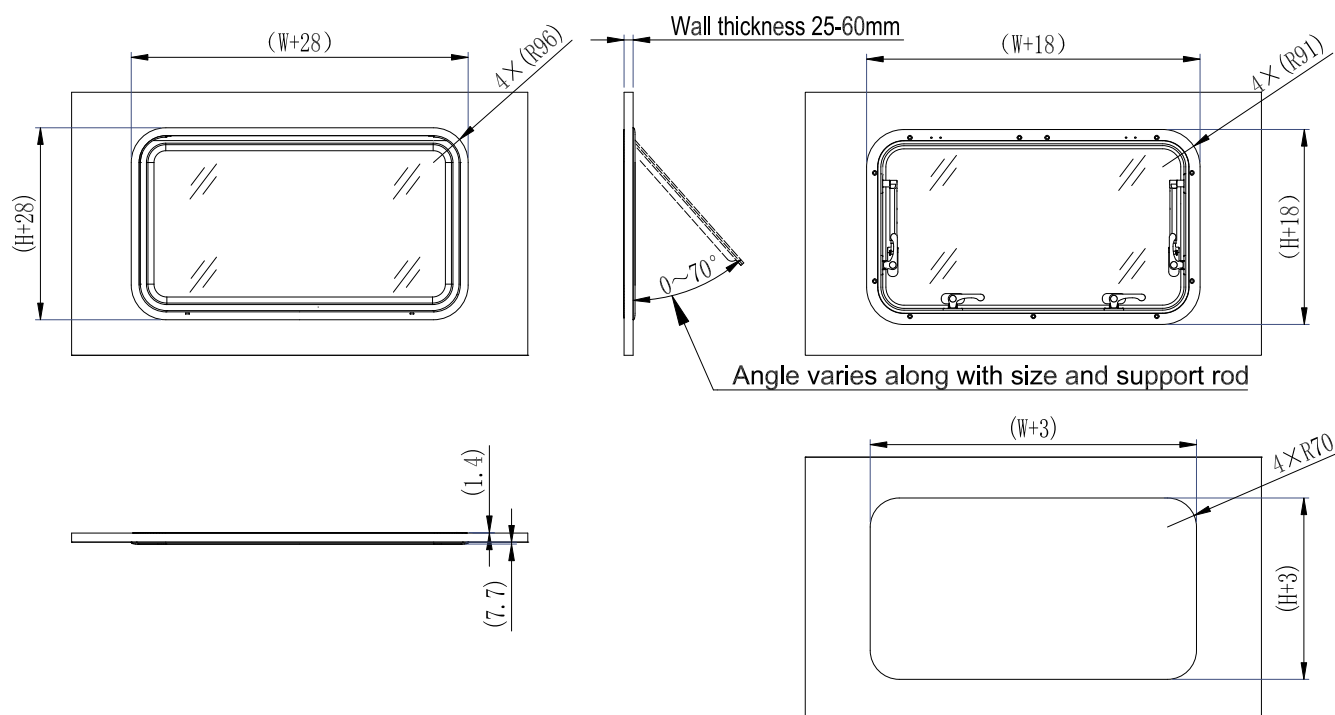


The specifications as shown by the following table.

The Specifications of Euro Classic Window					
S/N	Specification(H*W)	S/N	Specification(H*W)	S/N	Specification(H*W)
1	300*500	11	450*800	21	520*900
2	300*700	12	450*900	22	550*700
3	300*1100	13	450*1000	23	550*900
4	350*600	14	450*1100	24	550*1100
5	350*1200	15	500*300	25	550*1450
6	350*1450	16	500*450	26	600*350
7	400*700	17	500*520	27	800*1000
8	400*1200	18	500*900	28	800*1200
9	450*500	19	500*1200	29	900*900
10	450*610	20	520*500		


Packing List

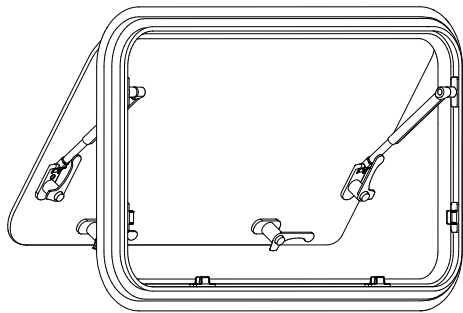

Euro Classic Window

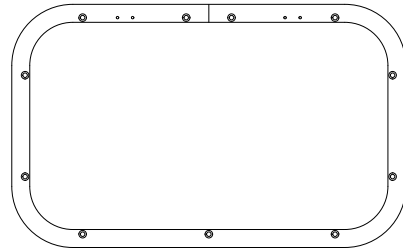

Mounting Frame

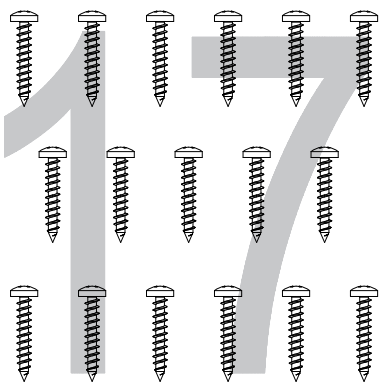


ST4*16 Cross Recessed
Pan Head Tapping Screws




The packing list is only the example for the specification of 500×900. Please refer to mounting screws matching list for the specification and number of other types of mounting screws.

Installation of Euro Classic Window

1. Tapping mounting holes on the vehicle's shell, where the thickness around the holes should be more than 30mm to guarantee a solid mounting, as per the hole sizes indicated in the "Mounting Size".


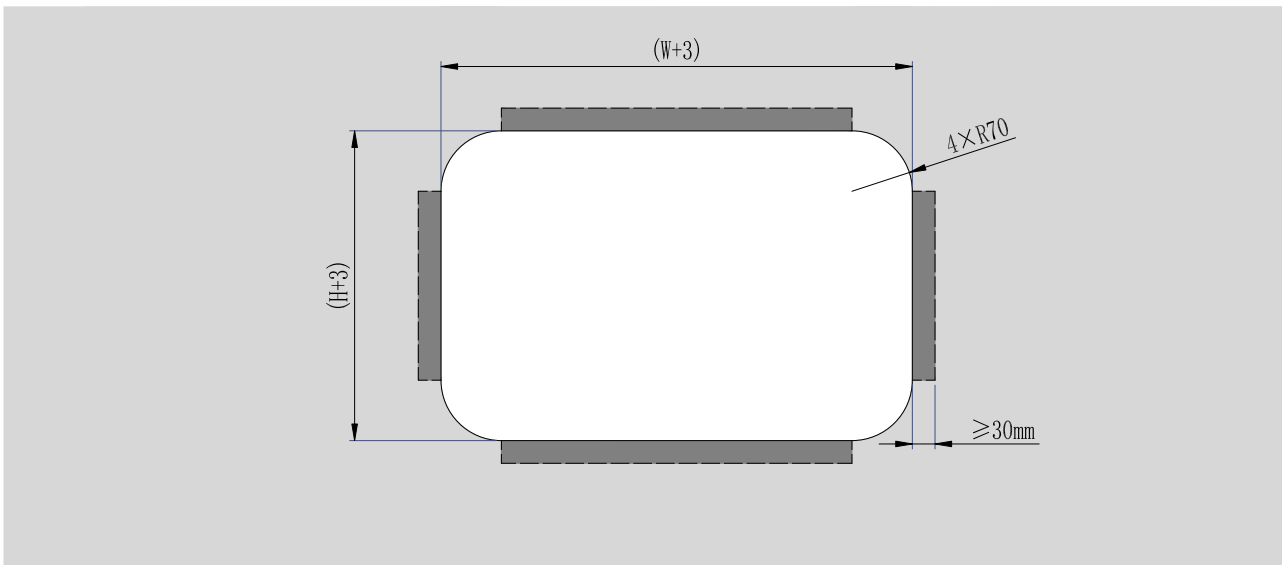


2. Spray a circle of sealant evenly on the mounting side of the Euro Classic Window (outer aluminum frame product with rubber strip can be an alternative solution if the mounting wall is fairly even).

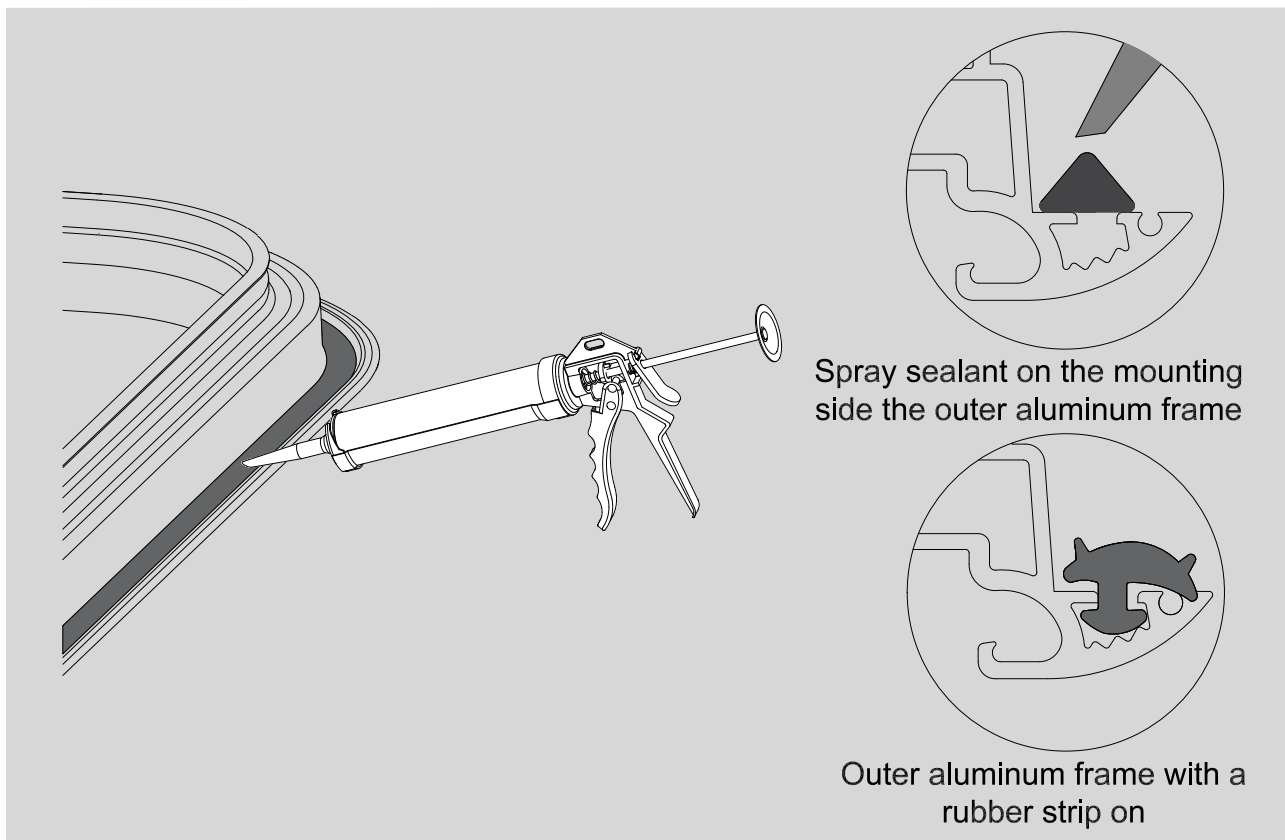



Installation of Euro Classic Window

3. Mount the window and the mounting frame from inside and outside respectively of the vehicle, and fix them on the wall with 17 ST4*16 cross recessed pan head tapping screws.

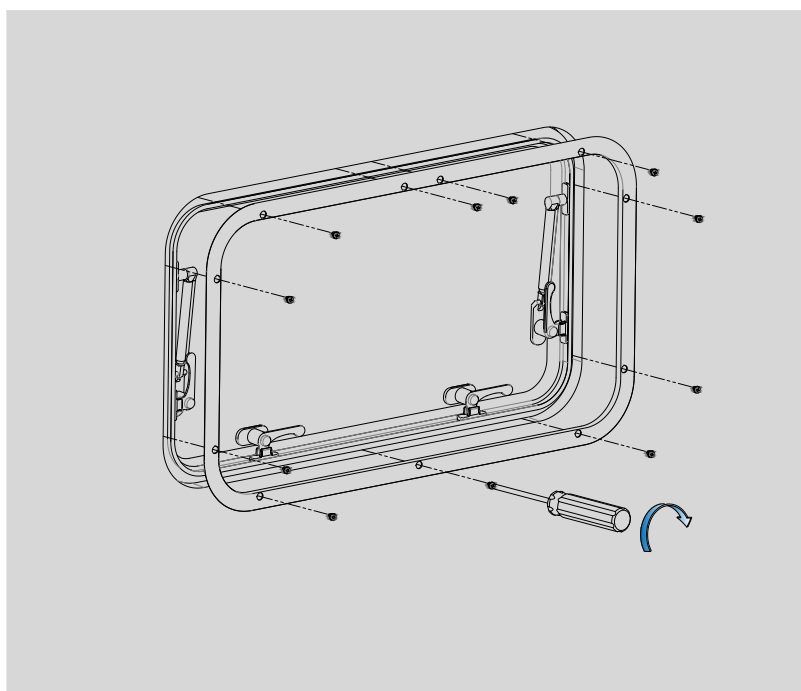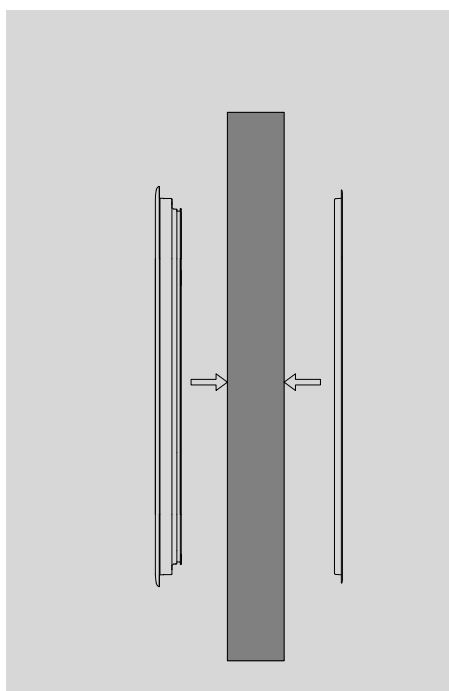

i The frame body should keep align with the holes, and the gaps around should be identical.

The specification and the number of the mounting screws required as shown by the following table.

Mounting Screws Matching List			
S/N	Thickness of the wall (mm)	Specification	Mounting Frame
1	25-28	ST4. 0*14	 LX6087
2	29-32	ST4. 0*16	
3	33-35	ST4. 0*20	
4	36-38	ST4. 0*14	 LX6334
5	39-42	ST4. 0*16	
6	43-45	ST4. 0*20	
7	46-49	ST4. 0*12	 LXA2191
8	50-53	ST4. 0*14	 LX9735
9	54-57	ST4. 0*16	
10	58-60	ST4. 0*20	



Correct specification should be adopted in case of penetrating the frame body, causing damage to the product.

Warranty

1. One year warranty is provided for the whole product.
2. Within warranty period, please contact the manufacturer or return it to the sales outlet for repair if the product is defective.
3. Within the warranty period, a fee-based repair and lifetime service will be provided in case of one of the following cases:
 - 1) Failure to present warranty card and valid proof of purchase;
 - 2) Alteration of invoice;
 - 3) Failure and damage caused by accidental factors and improper use;
 - 4) Failure and damage caused by self-repair without authorization;
 - 5) Damage caused by using a power supply or voltage other than specified;
 - 6) Products that have been repaired and continue to be used beyond the validity period of warranty;
4. The validity period of warranty is from the date of receiving. During the validity period of warranty, consumers can apply for repairs, returns and exchanges with the invoice and the warranty card.



Product warranty card

Product name: _____
Product model: _____
Serial number: _____
Date of manufacture: _____
Customer name: _____ Contact number: _____
Customer address: _____

Warranty content: _____
After sales: _____
Customer signature: _____ ☐ Satisfied ☐ Dissatisfied

Warranty content: _____
After sales: _____
Customer signature: _____ ☐ Satisfied ☐ Dissatisfied

Warranty content: _____
After sales: _____
Customer signature: _____ ☐ Satisfied ☐ Dissatisfied

